

---

# Table of Contents

<b>Preface</b>		
Contact ACES Systems		1
Warranty		3
Calibration and Certification		4
<b>1 Introduction</b>		
1.1	Notes, Cautions, and Warnings Definitions	1-2
1.1.1	General Notes, Cautions, and Warnings	1-2
1.2	Conventions	1-3
<b>2 JEDA Description</b>		
2.1	Input and Output Ports	2-2
2.1.1	2,35 PRES Input	2-2
2.1.2	3.0 PRES Input	2-2
2.1.3	AMB PRES Input	2-2
2.1.4	2.35 TEMP Input	2-2
2.1.5	3.0 TEMP Input	2-3
2.1.6	FUEL TEMP Input	2-3
2.1.7	AMB TEMP Input	2-3
2.1.8	DEEC COMM Input/Output	2-3
2.1.9	COMM Input/Output	2-3
2.1.10	EEC/DEEC Input/Output	2-4
2.1.11	POWER Switch	2-4
2.1.12	BATTERY Level Indicator	2-4
2.1.13	BATT CHG Input	2-4
2.2	Additional Standard Equipment	2-5
2.2.1	Battery	2-5
2.2.2	Battery Charger	2-5
2.2.2.1	Charging the Battery	2-6
2.2.3	Case	2-7
2.2.4	Owners Manual	2-7
2.2.5	Software, JEDA Comm for Windows	2-7
2.2.6	Procedure, TFE731 EMS	2-7
2.2.7	Cable, N1 DEEC Computer-to-JEDA, 10 ft.	2-7
2.2.8	Cable, Communications, 1752B-to-JEDA	2-8
2.2.9	Converter, RS232-to-RS422	2-8
2.2.10	Cable, Ambient Temp, JEDA	2-8
2.2.11	Assembly, Sensor, RTD Ambient Temp	2-8
2.3	Optional Equipment	2-9
2.3.1	Cable, DEEC Comm, Lear 45	2-9
2.3.2	Cable, DEEC Comm, Falcon 900EX / IAI SPX	2-9
2.3.3	Cable, Pressure Transducer, Ambient	2-10
2.3.4	Transducer, AMB Pressure	2-10

2.3.5	Cable, Pressure Transducer, 2.35 / 3.0	2-10
2.3.6	Transducer, 2.35 Pressure	2-11
2.3.7	Transducer, 3.0 Pressure	2-11
2.3.8	Hose, Pressure, 2.35 / 3.0 Transducer	2-11
2.3.9	Adapter, DB25F-to-DB9F	2-11
2.3.10	Cable, 2.35 Temp	2-11
2.3.11	Cable, 3.0 Temp	2-11
2.3.12	Meter, Fuel Flow, Turbine	2-12
2.3.13	Cable, Fuel Flow	2-12
2.3.14	Probe, RTD Fuel Temp	2-12
2.3.15	Cable, Fuel Temp	2-12
2.3.16	Harness, DEEC	2-12
2.3.17	Harness, EEC	2-13
<b>3 Equipment and Accessory Troubleshooting</b>		
3.1	Battery Charger	3-1
3.2	Cables	3-1
3.3	Handling of the Unit	3-2
3.4	Accessories	3-2
3.5	Application Notes	3-2