
Table of Contents

(Revision 4, July 2007)

Preface (Rev 4, July 2007)		
Contact ACES Systems		1
Warranty		3
Calibration and Certification		4
1 Introduction (Rev 2, April 2005)		
1.1	Notes, Cautions, and Warnings	1-2
1.2	Conventions	1-2
2 Analyzer Description (Rev 4, July 2007)		
2.1	Keypad	2-2
2.2	Screen	2-4
2.3	Input and Output Ports	2-5
2.3.1	CHANNEL Ports	2-5
2.3.2	TACH Ports	2-5
2.3.3	BATT CHG Port	2-5
2.3.4	AUX/COMM Port	2-6
2.3.5	STROBE Port	2-6
2.4	Standard Equipment	2-6
2.4.1	Battery	2-6
2.4.2	Battery Charger	2-7
2.4.2.1	Charging the Battery	2-7
2.4.3	Communications/Printer Cable	2-8
2.4.4	Carrying Case	2-8
2.4.5	User Manual	2-9
2.5	Optional Equipment	2-9
2.5.1	Propeller Balancing Kit	2-9
2.5.1.1	Manual, <i>ACES Systems Guide to Propeller Balancing</i>	2-9
2.5.1.2	991D-1 Accelerometer	2-10
2.5.1.3	991D-1 Sensor Cable	2-10
2.5.1.4	Phototach	2-11
2.5.1.5	Tachometer Sensor Cable	2-11
2.5.1.6	Propeller Protractor	2-12
2.5.1.6.1	Using the Propeller Protractor	2-12
2.5.1.7	Case Bolt Adapter Set	2-13
2.5.1.8	Tackle Box	2-13
2.5.1.9	Right-Angle Sensor Mount	2-14
2.5.1.10	Gram Scale	2-14
2.5.1.11	Video Tape, Using the Model 2020 ProBalancer Analyzer	2-14
2.5.1.12	Reflective Tape	2-14

3 Using the Model 2015 ProBalancer Analyzer (Rev 3, April 2006)		
3.1	Entering Data	3-1
3.1.1	Using the Keys	3-1
3.1.2	Filling in Fields	3-2
3.2	Loading a Setup	3-2
3.3	Main Menu	3-3
3.3.1	Adjusting the Screen Contrast	3-3

4 Propeller Balance (Rev 4, July 2007)		
4.1	Start Job	4-1
4.1.1	Prop Balance Setup	4-3
4.1.1.1	Prop Balance Setup Description	4-4
4.1.1.1.1	Edit ICF	4-5
4.1.1.1.2	Sensor Setup	4-6
4.1.2	Customer Information	4-7
4.1.3	Engine Information	4-7
4.1.4	Connect Sensors	4-7
4.1.4.1	Tachometer Setup	4-8
4.1.5	Start Aircraft	4-9
4.1.6	Acquiring Data	4-9
4.1.7	Review Job	4-10
4.1.8	Balance Solution	4-11
4.1.8.1	Set Split Weights	4-12
4.1.8.2	Record Split Weights	4-12
4.1.9	Vibration Summary	4-14
4.2	Resume Job	4-16
4.3	Manage Jobs	4-16
4.3.1	Review	4-17
4.3.2	Print	4-17
4.3.3	Print All	4-17
4.3.4	Delete	4-17
4.3.5	Delete All	4-17
4.4	Manage Setups	4-18
4.4.1	Edit	4-18
4.4.2	New	4-18
4.4.3	Print	4-18
4.4.4	Print All	4-18
4.4.5	Delete	4-19
4.5	Weight Calculator	4-19

5 Main Rotor Track & Balance (Rev 4, July 2007)		
5.1	Start Job	5-1
5.1.1	Main Rotor Setup	5-2
5.1.2	Customer Information	5-4
5.1.3	Tracking Selections	5-4
5.1.4	Connect Sensors	5-4
5.1.4.1	Optical Tachometer Setup	5-5
5.1.5	Start Aircraft	5-6
5.1.5.1	Select Aircraft Condition	5-6
5.1.5.2	Acquiring Vibration Data	5-7
5.1.5.3	Review Data	5-7

5.1.5.4	Review Prior Runs	5-8
5.2	Resume Job	5-8
5.3	Manage Jobs	5-9
5.3.1	Review	5-9
5.3.2	Print	5-10
5.3.3	Print All	5-10
5.3.4	Delete	5-10
5.3.5	Delete All	5-10
5.4	Manage Setups	5-11
5.4.1	Edit	5-11
5.4.2	New	5-11
5.4.3	Print	5-11
5.4.4	Print All	5-11
5.4.5	Delete	5-12
6 Tail Rotor Balance (Rev 3, April 2006)		
6.1	Start Job	6-1
6.1.1	Tail Rotor Setup	6-2
6.1.2	Customer Information	6-3
6.1.3	Connect Sensors	6-4
6.1.3.1	Vibration Sensor Installation	6-4
6.1.3.2	Phototach Installation and Test	6-4
6.1.4	Start Aircraft	6-5
6.1.4.1	Run 1, Acquiring Vibration Data	6-6
6.1.4.2	Review Prior Run(s) Data	6-6
6.2	Resume Job	6-7
6.3	Manage Jobs	6-7
6.3.1	Review	6-8
6.3.2	Print	6-8
6.3.3	Print All	6-8
6.3.4	Delete	6-8
6.3.5	Delete All	6-8
6.4	Manage Setups	6-9
6.4.1	Edit	6-9
6.4.2	New	6-9
6.4.3	Print	6-9
6.4.4	Print All	6-9
6.4.5	Delete	6-10
7 Vibration Spectrum Surveys (Rev 3, July 2007)		
7.1	Start Job	7-2
7.1.1	Spectra Setup	7-3
7.1.1.1	Edit Conditions	7-5
7.1.2	Customer Information	7-6
7.1.3	Engine Information	7-7
7.1.4	Select Aircraft Condition	7-7
7.1.5	Start Component	7-7
7.1.6	Collecting Data	7-8
7.1.7	Storing Data	7-11
7.2	Resume Job	7-13
7.3	Manage Jobs	7-13
7.3.1	Review	7-14

7.3.2	Print	7-14
7.3.3	Print All	7-14
7.3.4	Delete	7-14
7.3.5	Delete All	7-15
7.4	Manage Setups	7-15
7.4.1	Edit	7-15
7.4.2	New	7-15
7.4.3	Print	7-15
7.4.4	Print All	7-16
7.4.5	Delete	7-16
8 Monitor Spectrum (Rev 3, July 2007)		
9 Monitor IPS and Clock (Rev 3, July 2007)		
10 Monitor Magnitude and Phase (Rev 3, July 2007)		
11 Monitor Overall Vibration (Rev 4, July 2007)		
12 Check Track (Rev 3, April 2006)		
13 Transfer Data with PC and Miscellaneous (Rev 3, July 2007)		
13.1	Transfer Data with PC	13-1
13.2	Miscellaneous Items	13-2
13.2.1	Setup Printers	13-3
13.2.2	Setup Sensors	13-4
13.2.2.1	Print or Print All	13-5
13.2.3	Set Date and Time	13-5
13.2.4	Check Battery	13-6
13.2.5	Analyzer Information	13-7
13.2.6	Database Information	13-9
14 Printing (Rev 2, April 2005)		
14.1	Supported Printers	14-1
14.2	Printer Data Setup	14-2
14.3	Printer Equipment Setup	14-4
14.3.1	Print to a Serial Printer with DB25M Connector	14-4
14.3.1.1	Equipment Required	14-4
14.3.1.2	Equipment Setup	14-4
14.3.2	Print to Serial Printer with DB9M Connector	14-5
14.3.2.1	Equipment Required	14-5
14.3.2.2	Equipment Setup	14-5
14.3.3	Print to a Parallel Printer with Converter	14-6
14.3.3.1	Equipment Required	14-6
14.3.3.2	Equipment Setup	14-7
14.3.4	Print to a Parallel Printer with Powered Converter	14-8
14.3.4.1	Equipment Required	14-8
14.3.4.2	Equipment Setup	14-9
14.4	Print	14-10

15 Equipment and Accessory Setup and Troubleshooting (Rev 3, April 2006)		
15.1	Battery Charger	15-1
15.2	Cables	15-1
15.3	LASETACH®	15-2
15.4	Phototach	15-2
15.5	Propeller Protractor	15-2
15.6	Reflective Tape (3M Tape, Model 7610)	15-2
15.6.1	Reflective Tape Width Requirements	15-3
15.7	Vibration Sensor	15-4
15.8	Optical Tachometer	15-4
15.9	Reinitializing the ProBalancer	15-4
16 Reading Spectrum and Scales (Rev 2, April 2005)		
16.1	Reading the X and Y Plotted Vibration Spectrum	16-1
16.2	Reading the Converging Vibration Indicator and Scale	16-2
17 Specifications, Model 2015 ProBalancer Analyzer (Rev 2, April 2005)		