

---

# Table of Contents (Revision 3.01, Aug 2007)

## **Preface (Revision 2, Aug 2007)**

Contact ACES Systems	1
Warranty	3
Calibration and Certification	4

## **1 Introduction (Revision 1, Aug 2007)**

1.1 Notes, Cautions, and Warnings	1-2
1.2 Conventions	1-2

## **2 Analyzer Description (Revision 2, Aug 2007)**

2.1 Keypad	2-2
2.2 Screen	2-5
2.3 Input and Output Ports	2-6
2.3.1 CHANNEL Ports	2-6
2.3.2 TACH Ports	2-6
2.3.3 AUX/COMM Port	2-6
2.3.4 STROBE Port	2-7
2.3.5 USB Port	2-7
2.3.6 BATT CHG Port	2-7
2.4 Additional Standard Equipment	2-8
2.4.1 Battery	2-8
2.4.1.1 Nickel Cadmium (NiCd) equipped analyzers	2-8
2.4.1.2 Nickel Metal Hydride (NiMH) equipped analyzers	2-8
2.4.2 Battery Charger	2-9
2.4.2.1 Nickel Cadmium (NiCd) equipped analyzers	2-9
2.4.2.2 Nickel Metal Hydride (NiMH) equipped analyzers	2-10
2.4.3 Communications/Printer Cable	2-10
2.4.4 Carrying Case	2-11
2.4.5 User Manual	2-11
2.5 Optional Equipment	2-11
2.5.1 Propeller Balancing Kit	2-12
2.5.1.1 Manual, ACES Systems Guide to Propeller Balancing	2-12
2.5.1.2 991D-1 Accelerometer	2-12
2.5.1.3 991D-1 Sensor Cable	2-13
2.5.1.4 Phototach	2-13
2.5.1.5 Tachometer Sensor Cable	2-14
2.5.1.6 Propeller Protractor	2-14
2.5.1.6.1 Using the Propeller Protractor	2-15
2.5.1.7 Case Bolt Adapter Set	2-16
2.5.1.8 Tackle Box	2-16
2.5.1.9 Right-Angle Sensor Mount	2-16
2.5.1.10 Gram Scale	2-16
2.5.1.11 Reflective Tape	2-16
2.5.1.12 ACES Systems Balance Placard	2-17
2.5.2 USB Communications Cable	2-17

<b>3 Using the VIPER 4040 (Revision 2, Aug 2007)</b>		
3.1	Entering Data	3-1
3.1.1	Using the Keys	3-1
3.1.2	Filling in Fields	3-2
3.2	Loading a Setup	3-2
3.3	Main Menu	3-3

<b>4 Propeller Balance (Revision 1, Aug 2007)</b>		
4.1	Start Job	4-2
4.1.1	Prop Balance Setup	4-3
4.1.1.1	Prop Balance Setup Screen	4-4
4.1.1.2	Edit ICF	4-6
4.1.1.3	Sensor Setup	4-7
4.1.1.4	Prop Hole Layout Setup	4-8
4.1.2	Job Identification	4-10
4.1.3	Engine Information	4-11
4.1.4	Connect Sensors	4-11
4.1.4.1	Connect Sensors	4-12
4.1.4.2	Tachometer Setup	4-12
4.1.5	Start Aircraft	4-13
4.1.6	Acquiring Data	4-14
4.1.7	Review Job	4-14
4.1.8	Balance Solution	4-15
4.1.8.1	Set Split Weights	4-17
4.1.8.2	Record Split Weights	4-17
4.2	Resume Job	4-19
4.3	Manage Jobs	4-20
4.3.1	Review	4-20
4.3.2	Print	4-20
4.3.3	Print All	4-20
4.3.4	Delete	4-21
4.3.5	Delete All	4-21
4.4	Manage Setups	4-21
4.4.1	Edit	4-21
4.4.2	New	4-22
4.4.3	Print	4-22
4.4.4	Print All	4-22
4.4.5	Delete	4-22

<b>5 Main Rotor Track &amp; Balance (Revision 2, Aug 2007)</b>		
5.1	Analyzer Chart Forms	5-1
5.1.1	Regular Chart Forms	5-1
5.1.1.1	Regular Main Rotor Chart Setup	5-2
5.1.2	Irregular Chart Forms	5-3
5.1.2.1	Irregular Main Rotor Chart Setup	5-4
5.1.3	Tracking Influence Setup	5-6
5.2	Setup Process	5-7
5.2.1	Main Rotor Setup	5-7
5.2.1.1	Main Rotor Setup Screen	5-7
5.2.1.2	Tracking Setup Screen	5-9

5.2.1.3	Main Rotor Condition Setup Screen	5-10
5.2.1.3.1	Conditions Setup Screen, Example 2	5-11
5.2.1.3.2	Conditions Setup Screen, Example 3	5-12
5.2.1.4	Main Rotor Adjustment Symbol Setup and Solution Logic Setup Screen	5-12
5.2.1.5	Chart Definition	5-13
5.2.1.6	Main Rotor Setup Example	5-13
5.2.1.6.1	Main Rotor Setup Screen	5-15
5.2.1.6.2	Tracking Setup Screen	5-16
5.2.1.6.3	Main Rotor Conditions Setup	5-16
5.2.1.6.4	Main Rotor Adjustment Symbol and Solution Logic Setup	5-17
5.2.1.6.5	Vertical: Hover Chart Definition	5-18
5.2.1.6.6	Vertical: FLT 80 – FLT 120 Chart Definition Example 1	5-19
5.2.1.6.7	Lateral Hover Chart	5-20
5.3	Main Rotor Balance Process	5-21
5.3.1	Starting a New Job	5-22
5.3.2	Setup List	5-23
5.3.3	Job Identification	5-23
5.3.4	Tracking Selections	5-24
5.3.5	Connect Sensors	5-25
5.3.5.1	Optical Tachometer Setup (Optional)	5-25
5.3.6	Start Aircraft	5-26
5.3.7	Select Aircraft Condition	5-27
5.3.8	Data Acquisition	5-28
5.3.9	Review Data	5-29
5.3.9.1	Track Measurement	5-30
5.3.9.2	Check Track - Results	5-30
5.3.10	Shut Down Engines	5-31
5.3.11	Review Prior Run(s) Data	5-32
5.3.12	Solution Screens	5-32
5.3.12.1	Example Solution Screen #1	5-33
5.3.12.2	Example Solution Screen #2	5-34
5.3.12.3	Example Solution Screen #3	5-35
5.4	Main Rotor Manage Data Functions	5-35
5.4.1	Main Rotor Review Job	5-36
5.4.2	View Main Rotor Track and Balance	5-37
5.4.3	View Main Rotor Chart	5-38
5.4.4	View Main Rotor Chart ICFs	5-39
<b>6 Tail Rotor Balance (Revision 2, Aug 2007)</b>		
6.1	Analyzer Chart Forms	6-1
6.1.1	Regular Chart Forms	6-1
6.1.1.1	Regular Tail Rotor Chart Setup	6-2
6.1.2	Irregular Chart Forms	6-3
6.1.2.1	Irregular Tail Rotor Chart Setup	6-3
6.2	Tail Rotor Setup	6-5
6.2.1	Tail Rotor Setup Screen	6-5
6.2.2	Tail Rotor Chart Setup	6-7
6.3	Multiple Condition Setup	6-8
6.3.1	Tail Rotor Setup Screen	6-8
6.3.2	Tail Rotor Condition Setup Screen	6-10
6.3.3	First Condition Tail Rotor Chart Setup Screen	6-11

6.3.4	Second Condition Tail Rotor Chart Setup Screen	6-12
6.4	Tail Rotor Balance Process	6-14
6.4.1	Starting a New Job	6-14
6.4.2	Setup List	6-15
6.4.3	Job Identification	6-16
6.4.4	Connect Sensors	6-16
6.4.5	Start Aircraft	6-17
6.4.6	Select Tail Rotor Condition Screen	6-18
6.4.7	Data Acquisition	6-18
6.4.8	Shut Down Engines	6-20
6.4.9	Review Prior Run(s) Data	6-20
6.4.10	Tail Rotor Suggested/Installed Weights Screen	6-21
6.5	Tail Rotor Manage Data Functions	6-22
6.5.1	View Tail Rotor Balance	6-22
6.5.2	View Tail Rotor Chart	6-23

## **7 Fan/Turbine Balance and Fan Blade Optimizer (Revision 3.01, Aug 2007)**

7.1	Fan/Turbine Balance	7-1
7.1.1	Start Job	7-1
7.1.2	Setup List	7-2
7.1.3	Fan/Turbine Balance Setup Screen	7-2
7.1.4	Incomplete Job	7-3
7.1.5	Fan/Turbine Balance Setup	7-3
7.1.6	Complete the Fan/Turbine Balance Setup	7-4
7.1.7	Define Class Weights	7-7
7.1.8	Balance Plane Information Setup	7-10
7.1.9	Complete the Sensor Information Screen	7-13
7.1.10	Define Fan/Turbine Balance ICFs	7-14
7.1.11	Job Identification Screen	7-15
7.1.12	Engine Information Screen	7-15
7.1.13	Fan/Turbine Balance Equipment Setup	7-15
7.1.14	Test Tach Power	7-16
7.1.15	Start Aircraft	7-17
7.1.16	Data Acquisition	7-18
7.1.17	Shut Down Engines	7-19
7.1.18	Review Prior Run(s) Data	7-19
7.1.19	Fan/Turbine Suggested/Installed Weights	7-19
7.1.20	Start Aircraft	7-20
7.2	Fan Blade Optimizer	7-21
7.2.1	Start Job	7-21
7.2.2	Select Setup List	7-22
7.2.3	Fan Blade Optimizer Setup	7-22
7.2.4	Job Identification Screen	7-23
7.2.5	Engine Information Screen	7-24
7.2.6	Fan Blade Optimizer Job Screen	7-24
7.2.7	Fan Blade Optimizer Result screen	7-25
7.2.8	Complete Blade Placement	7-26

## **8 TFE731 Performance (Revision 2, Aug 2007)**

8.1	TFE731 Performance EMS	8-1
8.1.1	Necessary Equipment	8-1

8.1.1.1	Datalogger (JEDA)	8-3
8.1.1.2	ACES AvTrend Software	8-3
8.1.1.3	RS232-to-RS422 Communications Cable	8-3
8.1.1.4	EEC, N2 DEEC, and N1 DEEC Comm Cable(s)	8-3
8.1.1.5	Ambient Temperature Probe and Cable	8-4
8.1.1.6	Optional sensors and cables	8-4
8.1.2	Analyzer Operation	8-4
8.1.3	Information Screens	8-13
8.1.4	Getting the latest software	8-17
8.2	JEDA Test Controller	RESERVED
<b>9 Vibration Spectrum Survey (Revision 3, Aug 2007)</b>		
9.1	Start Job	9-2
9.1.1	Spectra Setup	9-4
9.1.1.1	Spectra Setup	9-4
9.1.1.2	Edit Conditions	9-7
9.1.1.3	Speeds	9-7
9.1.1.4	Limits	9-9
9.1.2	Job Identification	9-10
9.1.3	Engine Information	9-11
9.1.4	Select Aircraft Condition	9-12
9.1.5	Start Component	9-12
9.1.6	Collecting Data	9-12
9.1.7	Storing Data	9-15
9.2	Resume Job	9-18
9.3	Manage Jobs	9-18
9.3.1	Review	9-19
9.3.2	Print	9-19
9.3.3	Print All	9-19
9.3.4	Delete	9-19
9.3.5	Delete All	9-19
9.4	Manage Setups	9-20
9.4.1	Edit	9-20
9.4.2	New	9-20
9.4.3	Print	9-20
9.4.4	Print All	9-21
9.4.5	Delete	9-21
<b>10 Overall Vibration Surveys (Rev. 3, Aug 2007)</b>		
10.1	Start Job	10-2
10.1.1	Overall Vibration Setup	10-4
10.1.1.1	To Complete the "Overall Vibration Setup" Screen	10-4
10.1.1.2	Conditions	10-6
10.1.1.3	Speeds	10-7
10.1.2	Job Identification	10-8
10.1.3	Engine Information	10-9
10.1.4	Select Aircraft Condition	10-9
10.1.5	Start Component	10-9
10.1.6	Collecting Data	10-10
10.2	Resume Job	10-11
10.3	Manage Jobs	10-11
10.3.1	Review	10-12

10.3.2	Print	10-12
10.3.3	Print All	10-12
10.3.4	Delete	10-12
10.3.5	Delete All	10-13
10.4	Manage Setups	10-13
10.4.1	Edit	10-13
10.4.2	New	10-13
10.4.3	Print	10-14
10.4.4	Print All	10-14
10.4.5	Delete	10-14
<b>11 Transient Vibration Surveys (Revision 2, Aug 2007)</b>		
11.1	Start Job	11-2
11.1.1	Transient Survey Setup	11-4
11.1.1.1	Config	11-6
11.1.1.2	Speeds	11-8
11.1.1.3	Parameters (Parms)	11-9
11.1.1.4	Plots	11-11
11.1.1.5	Limits	11-11
11.1.2	Job Identification	11-14
11.1.3	Engine Information	11-14
11.1.4	Start Engine	11-15
11.1.5	Select Aircraft Condition	11-15
11.1.6	Collecting Data	11-16
11.1.7	Storing Data	11-20
11.2	Resume Job	11-22
11.3	Manage Jobs	11-22
11.3.1	Review	11-23
11.3.2	Print	11-23
11.3.3	Print All	11-23
11.3.4	Delete	11-23
11.3.5	Delete All	11-24
11.4	Manage Setups	11-24
11.4.1	Edit	11-24
11.4.2	New	11-25
11.4.3	Print	11-25
11.4.4	Print All	11-25
11.4.5	Delete	11-25
11.4.6	Select Setup for Remote Job	11-26
<b>12 Monitor Spectrum (Revision 2, Aug 2007)</b>		
12.1	Spectra Setup	12-1
12.1.1	Monitor Spectrum Setup Screen	12-1
12.1.2	Speeds	12-4
12.1.4	Monitor	12-6
<b>13 Monitor Magnitude and Clock (Revision 1, Aug 2007)</b>		
<b>14 Monitor Magnitude and Phase (Revision 1, Aug 2007)</b>		
<b>15 Monitor Overall (Revision 2, Aug 2007)</b>		
15.1.1	Overall Vibration Setup Screen	15-1

15.1.2	Speeds	15-4
15.1.3	Monitor	15-5
<b>16 Check Track (Revision 2, Aug 2007)</b>		
<b>17 Transfer Data with PC (Revision 1, Aug 2007)</b>		
<b>18 Miscellaneous Items (Revision 3, Aug 2007)</b>		
18.1	Miscellaneous Items	18-1
18.1.1	Setup Printer	18-2
18.1.2	Setup Sensors	18-3
18.1.3	Set Date and Time	18-6
18.1.4	Set Power-Off Timeout	18-8
18.1.5	Set Job Count Limit	18-9
18.1.6	Check Battery	18-9
18.1.7	Analyzer Information	18-10
18.1.8	Database Information	18-12
18.1.9	Erase Entire Database	18-13
18.1.10	USB Information	18-13
18.1.11	Erase Orphaned Transient Spectra	18-13
18.1.12	Bus Test	18-14
18.1.13	EMS Comm Test	18-14
18.1.14	Show Welcome Screen	18-14
<b>19 Equipment and Accessory Setup and Troubleshooting (Revision 3, Aug 2007)</b>		
19.1	Battery Charger and Battery	19-1
19.2	Cables	19-5
19.3	LaseTach	19-6
19.4	Phototach	19-6
19.5	Propeller Protractor	19-6
19.6	Reflective Tape (3M Tape, Type 7610)	19-7
19.7	Vibration Sensors	19-8
19.8	Optical Tachometer	19-8
19.9	Reinitializing the Analyzer	19-8
19.10	Troubleshooting Ground Loop Issues	19-9
<b>20 Reading Spectrum and Scales (Revision 1, Aug 2007)</b>		
20.1	Reading the X and Y Plotted Vibration Spectrum	20-1
20.2	Reading the Converging Vibration Indicator Scale	20-2
<b>21 Printing (Revision 2, Aug 2007)</b>		
21.1	Supported Printers	21-1
21.2	Printer Data Setup	21-2
21.3	Printer Equipment Setup	21-4
21.3.1	Print to a Serial Printer	21-4
21.3.1.1	Equipment Required	21-4
21.3.1.2	Equipment Setup	21-4
21.3.2	Print to a Serial Printer with 9-Pin Connection	21-5
21.3.2.1	Equipment Required	21-5
21.3.2.2	Equipment Setup	21-5
21.3.3	Print to a Parallel Printer with Internally-Powered Converter	21-6

---

21.3.3.1	Equipment Required	21-6
21.3.3.2	Equipment Setup	21-7
21.3.4	Print to A Parallel Printer with Externally-Powered Converter	21-8
21.3.4.1	Equipment Required	21-8
21.3.4.2	Equipment Setup	21-8
21.4	Print	21-9

---

---

<b>22</b>	<b>Specifications for Viper 4040 (Revision 2, Aug 2007)</b>
-----------	---

---