
Table of Contents

(Revision 2, May 2005)

Description (Revision 2, May 2005)

1	Polar Balance Charts (Revision 2, May 2005)	
1.1	What Is a Polar Chart?	1-1
1.2	How Is a Polar Balance Chart Developed?	1-3
1.2.1	Reference Run	1-4
1.2.2	First Test Weight	1-4
1.2.3	Repeat Test Weight	1-4
1.2.4	Establishing the Move Lines	1-5
1.2.5	Entering the Influence Co-Efficient	1-7
1.2.6	How to Read a Polar Balance Chart	1-8
1.3	Required Information for EPS Chart Building	1-11
1.3.1	Types of Charts	1-11
1.3.2	Weight Positions	1-13
1.3.3	Types of Adjustments	1-13
1.3.4	Adjustment Move Line	1-14
1.3.5	Influence Co-Efficient	1-15
1.3.6	Equipment Setup	1-16
1.3.7	Applicability	1-16
2	Analyzer Setup (Revision 2, May 2005)	
2.1	Analyzer Chart Forms	2-1
2.1.1	“Regular” Chart Forms	2-1
2.1.1.1	“Regular” Main Rotor Chart Setup	2-2
2.1.1.2	“Regular” Tail Rotor Chart Setup	2-3
2.1.2	“Irregular” Chart Forms	2-5
2.1.2.1	“Irregular” Main Rotor Chart Setup	2-5
2.1.2.2	“Irregular” Tail Rotor Chart Setup	2-6
2.1.3	Tracking Influence Setup	2-8
2.2	Setup Process	2-8
2.2.1	Main Rotor Setup	2-8
2.2.1.1	Main Rotor Setup Screen	2-9
2.2.1.2	Tracking Setup Screen	2-11
2.2.1.3	Main Rotor Condition Setup Screen	2-11
2.2.1.3.1	Conditions Setup Screen, Example 2	2-13
2.2.1.3.2	Conditions Setup Screen, Example 3	2-13
2.2.1.4	Main Rotor Adjustment Symbol Setup	2-14
2.2.1.5	Chart Definition	2-14
2.2.1.6	Main Rotor Setup Example	2-15
2.2.1.6.1	Main Rotor Setup Screen	2-16
2.2.1.6.2	Tracking Setup Screen	2-17

2.2.1.6.3	Main Rotor Conditions Setup	2-17
2.2.1.6.4	Main Rotor Adjustment Symbol Setup	2-18
2.2.1.6.5	“Vertical: Hover” Chart Definition	2-19
2.2.1.6.6	“Vertical: FLT 80 – FLT120” Chart Definition	2-20
2.2.1.6.7	“Lateral Hover” Chart Definition	2-21
2.2.2	Tail Rotor Setup	2-22
2.2.2.1	Tail Rotor Setup Screen	2-22
2.2.2.1.1	Tail Rotor Condition Setup	2-24
2.2.2.2	Tail Rotor Chart Setup	2-25

3 Balancing with Enhanced Performance Software (Revision 2, May 2005)

3.1	Main Rotor Balance Process	3-1
3.1.1	Starting a New Job	3-2
3.1.2	Setup List	3-3
3.1.3	Customer Information	3-3
3.1.4	Tracking Selections	3-4
3.1.5	Connect Sensors	3-5
3.1.5.1	Optical Tachometer Setup (Optional)	3-5
3.1.6	Start Aircraft	3-6
3.1.7	Select Aircraft Condition	3-7
3.1.8	Data Acquisition	3-8
3.1.9	Review Data	3-9
3.1.9.1	Track Measurement	3-9
3.1.9.2	Check Track - Results	3-10
3.1.10	Shutdown Aircraft	3-11
3.1.11	Review Prior Run(s) Data	3-11
3.1.12	Solutions Screens	3-12
3.1.12.1	Example Solution Screen #1	3-12
3.1.12.2	Example Solution Screen #2	3-13
3.1.12.3	Example Solution Screen #3	3-14
3.2	Tail Rotor Balance Process	3-15
3.2.1	Starting a New Job	3-15
3.2.2	Setup List	3-16
3.2.3	Customer Information	3-17
3.2.4	Connect Sensors	3-17
3.2.5	Start Aircraft	3-18
3.2.5.1	Select Tail Rotor Condition (Optional)	3-19
3.2.6	Data Acquisition	3-19
3.2.6.1	Select Tail Rotor Condition (Optional)	3-20
3.2.7	Shutdown Aircraft	3-21
3.2.8	Review Prior Runs(s) Data	3-21
3.2.8.1	Review Prior Run(s) Data for Multiple Conditions	3-22
3.2.8.2	Maximum Weight Warning	3-22
3.2.9	Tail Rotor Suggested and Installed Weights	3-23
3.3	Quit Job	3-24

4 Manage Data (Revision 2, May 2005)

4.1	Main Rotor Review Job Functions	4-1
4.1.1	Main Rotor Review Job	4-2
4.1.2	View Main Rotor Track and Balance	4-2
4.1.3	View Main Rotor Chart	4-3
4.1.4	View Main Rotor Chart ICFs	4-4

4.2	Main Rotor Manage Setups	4-4
4.3	Tail Rotor Review Job Functions	4-6
4.3.1	View Tail Rotor Balance	4-6
4.3.2	View Tail Rotor Chart	4-7
4.4	Tail Rotor Manage Setups	4-8